


VEHICAL LOOP INSTALLATION - ELSEMA SYSTEM

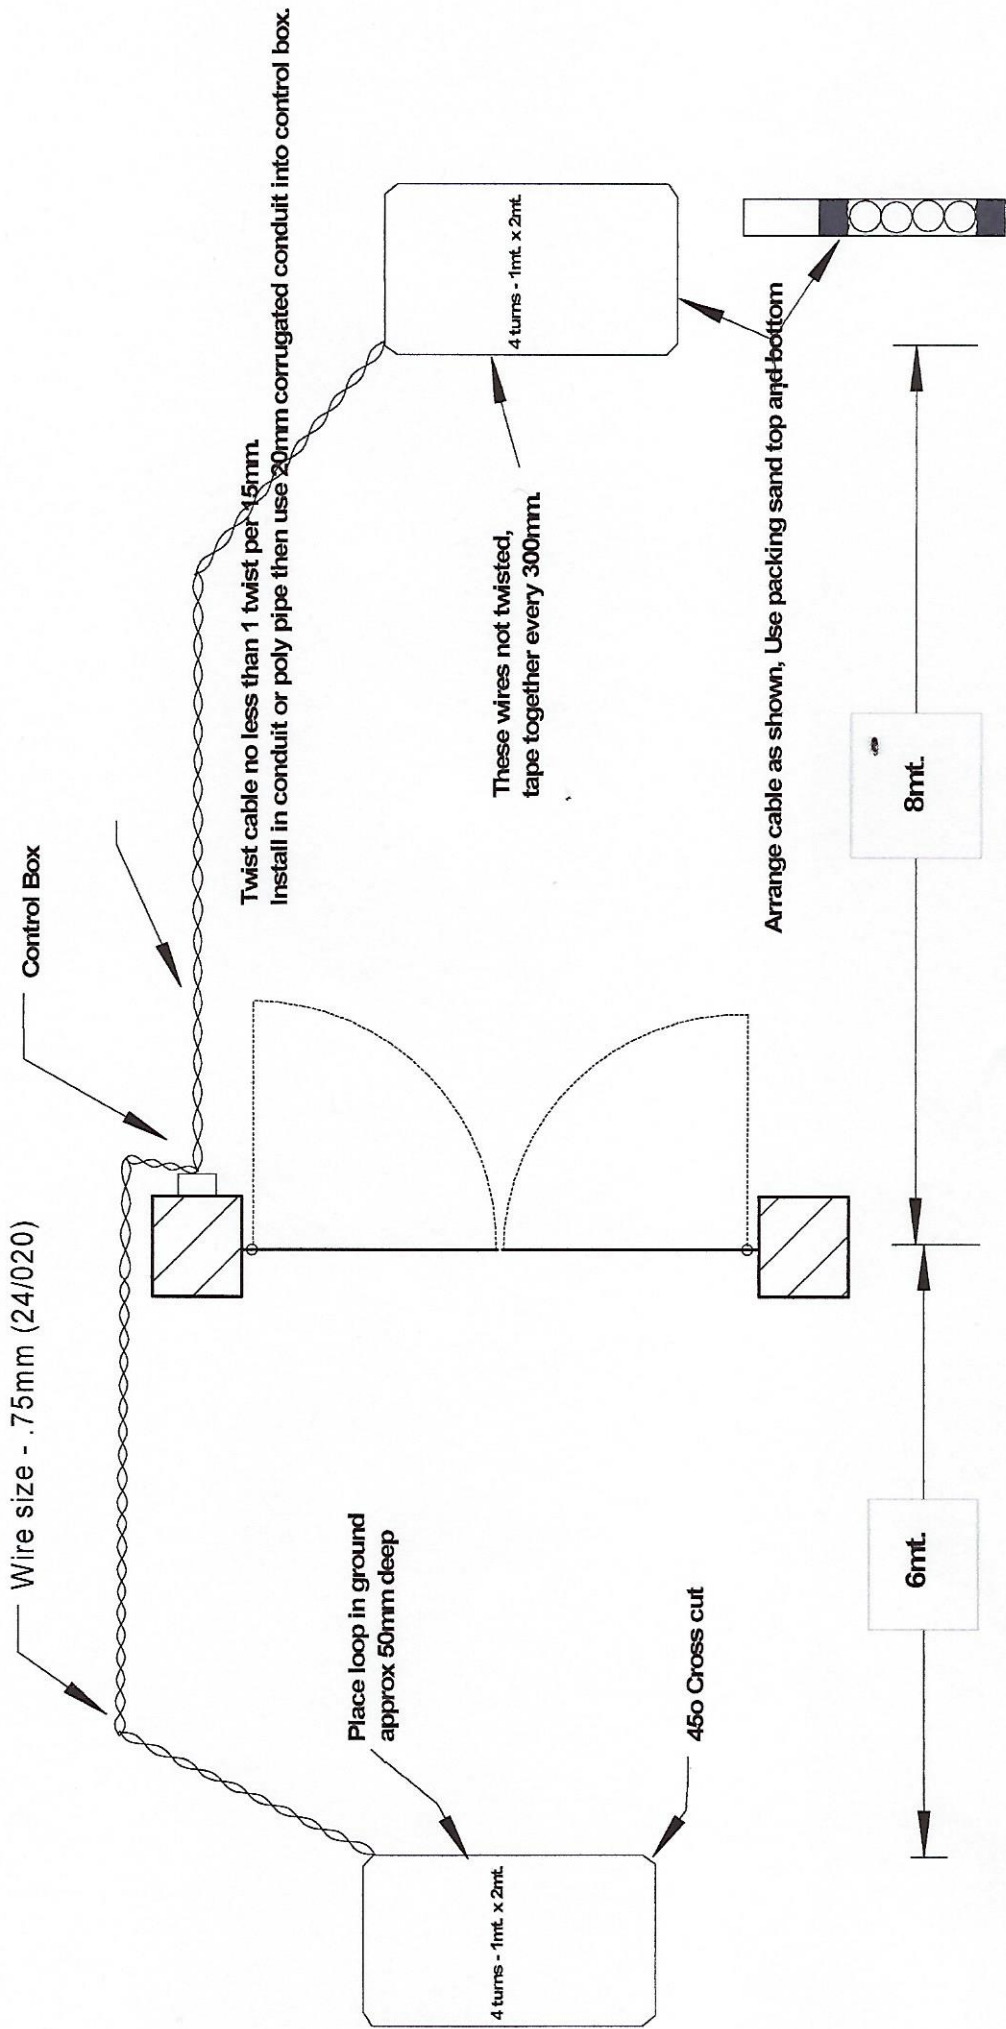

In gravel driveway cut a trench (1mt x 2mt) approx 10cm wide x 15cm deep.
with one corner cut to edge of drive.
Place packing sand in bottom of trench with loop on top as shown.
Place packing sand on top of loop then finish with driveway rock on top.